

Diesel Engine Maintenance Service

LEVEL 1 SERVICE

- Change Engine Oil
- Change Oil Filter
- 15 Point Inspection
- Lubrication
- Adjust Tire Pressure

LEVEL 2 SERVICE

- Change Engine Oil
- Change Oil Filter
- 15 Point Inspection
- Lubrication
- Rotate Tires
- Adjust Tire Pressure

LEVEL 3 SERVICE

- Change Engine Oil
- Change Oil Filter
- Peace of Mind Inspection (44 point)
- Rotate Tires
- Adjust Tire Pressure
- Brake Inspection
- Replace Fuel Filter
- Rear Differential Service
- Front Differential Service (4X4)

LEVEL 4 SERVICE

- Change Engine Oil
- Change Oil Filter
- Peace of Mind Inspection (44 Point)
- Rotate Tires
- Adjust Tire Pressure
- Inspect Fan Hub
- Inspect Damper
- Transmission Service
- Replace Fuel Filter
- Rear Differential Service
- Front Differential Service (4X4)
- Transfer Case Service (4X4)

Find your vehicles odometer reading in the table on the right to determine your next service level.



Service Level	KM
1	6,000
2	12,000
1	18,000
3	24,000
1	30,000
2	36,000
1	42,000
4	48,000
1	54,000
2	60,000
1	66,000
3	72,000
1	78,000
2	84,000
1	90,000
4	96,000
1	102,000
2	108,000
1	114,000
3	120,000
1	126,000
2	132,000
1	138,000
4	144,000
1	150,000
2	156,000
1	162,000
3	168,000
1	174,000
2	180,000
1	186,000
4	192,000
1	198,000
2	204,000
1	210,000
3	216,000
1	222,000
2	228,000
1	234,000
4	240,000

ADDITIONAL SERVICE REQUIREMENTS

- Cooling System Flush (every 48,000)
- Power Steering Flush (every 48,000)
- Brake System Flush (every 48,000)
- Fuel Injection Service (every 48,000)
- Manual Transmission Service (every 96,000)

- Diesel Tune-up (Replace Crankcase Ventilation Filter, Clean EGR and EGR Cooler - (every 108,000)